

TRANSISTOR MEGAPHONE

Instruction Manual


Thank you for selecting this megaphone, please read the instruction manual carefully before use to know how to operate it properly and effectively.

1. Package list

- 1.1 Megaphone
- 1.2 Instruction manual

2. Parts and Functions

- ① Speaker: Converts electrical signal into sound
- ② Signal switch: Switches the megaphone to the whistle (or siren) function.
(The model without this switch does not have this function.)
- ③ Power switch: Press this switch to activate the megaphone.
- ④ Handle grip: Used to hold this megaphone.
- ⑤ Latch: used to fasten the top cover with the megaphone.
- ⑥ Top cover: Holds the battery compartment.
- ⑦ Microphone: Comprised of an uni-directional dynamic cartridge that Converts sound into electrical signal.
- ⑧ Volume controller: Used to adjust the output volume. To increase volume, Turn direct clockwise.
- ⑨ Battery compartment: Holds 8 pcs C size batteries.

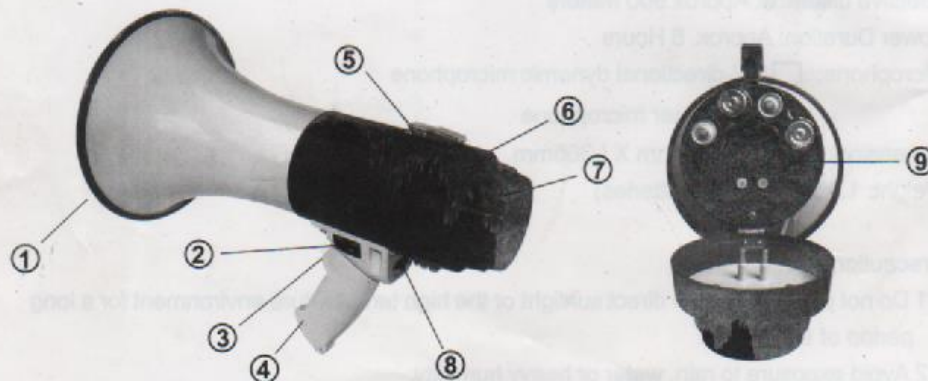

3. Operational Instructions:

- 3.1 Installing the batteries: Open up the latch and top cover. Remove the Three battery tubes. Put 2 pcs size C size batteries properly (+/- terminals must match) into each tube. Insert the tubes into the battery compartment; close the top cover and the latch.
- 3.2 Press the power switch. Adjust the volume to the desired position and speak to the microphone. Please note that the closer the sound source is to the microphone the better the amplification is.

- 3.3 If the megaphone is a model equipped with the siren function. Switch the signal switch to the siren position, the speaker will generate a continuous siren. While switch to the talk position, the siren will stop.
- 3.4 If the megaphone is a model equipped with the whistle function. Switch the signal switch to the whistle position, and press the power switch, the speaker will generate a continuous whistle. While release the power switch, the whistle will stop.
- 3.5 If the megaphone is activated and the volume of the speaker is weak, the batteries may be out of the power, Follow the step 3.1 to replace the batteries.

4. Basic Troubleshooting:

- 4.1 If the megaphone does not work, remove the batteries to check if the +/- terminals match correctly.
- 4.2 If the terminal match correctly, place back the batteries and press them down into the battery compartment firmly, make sure the batteries are in contact properly.

5. Specifications:

Rated output power: 18W (10W speaker, THD=10%)

Max output power: 25W

Power consumption: 25W (at rated output)

Power source: 1.5V X 8pcs (Size C) Battery

OUTPUT Current: 0.9A

Effective distance: Approx. 600 meters

Power Duration: Approx. 6 Hours

Microphone: Uni-directional dynamic microphone

Condenser microphone

Dimension: HORN Φ 230mm X L365mm

Weight: 1.45kg (without batteries)

6. Precautions:

- 6.1 Do not place under the direct sunlight or the high temperature environment for a long period of time.
- 6.2 Avoid exposure to rain, water or heavy humidity.
- 6.3 Don't use the megaphone close to people's ears. This may cause hearing damage.
- 6.4 If not in use for a long period of time, remove the batteries and store them separately to prevent leaking batteries and damaging the circuits inside the megaphone.
- 6.5 When the megaphone is not in use, put signal switch to the left position (the neutral position). This is the battery power saving procedure that will make the battery work longer for your megaphone.